

# Installation recommendation fidbox



**Congratulations, you have decided for the use of the fidbox. A good Decision in favour of your secure future.**

When the **fidbox** that you ordered leaves our humidity chamber, we check the complete functionality and provide you with our guarantee. Already at this point in time, **fidbox** begins with long term measurement and data collection. Please pay attention to the following instructions and help ensure the flawless functioning of the **fidbox**.

Choose the optimal location of the **fidbox** together with the builder before the installation. The **fidbox** should be integrated into the warmest area of inhabitancy, for example, in the living room or in the vicinity of the underfloor heating. In larger projects of 100 m<sup>2</sup> and more, in multiple story buildings or with diverse types of premises use, in each case the **fidbox** installation should be planned for each level individually. We will gladly support you during the planning stage

## **Please observe:**

- Store **fidbox**, frost-proof at room temperature
- Safeguard the **fidbox** until use in the aluminium storage box.
- Never subject the unprotected **fidbox** to the direct sunlight or submerge in water.
- Do not crack, bend or drill objects or saw through the **fidbox**.

## **Avoid falsifications of measuring data:**

- no furniture over or on the emplaced **fidbox**
- do not lay textile rugs on the area of the emplaced **fidbox**
- Exclude and avoid strong electronic radiation for example from mobile telephones at the position of the **fidbox**

Helmut Jilg fidboxteam Entwicklung  
Außermanzing 28, A-3033 Alltengbach  
Fon.: +43 – (0) 2774 - 6747-0  
Fax.: +43 – (0) 2774 – 6747 – 19  
email: [office@fidbox.at](mailto:office@fidbox.at)  
[www.fidbox.at](http://www.fidbox.at)



Jochen Bischoff fidboxteam Vertrieb  
Alte Stuttgarter Str. 70, D-70195 Stuttgart  
Fon.: +49 – (0) 711 – 315 65 70  
Fax.: +49 – (0) 711 – 315 65 88  
email: [office@fidbox.de](mailto:office@fidbox.de)  
[www.fidbox.de](http://www.fidbox.de)

# step for step




## 1<sup>st</sup> step

The **fidbox** can be integrated on all substrates into the parquet element. It is necessary, that before or during the installation process a parquet element is used to mill out the necessary dimensions with the aid of a Template. This can be accomplished professionally using a top milling machine or with the use of suitable tools.



## 2<sup>nd</sup> step

During the parquet installation the cover of the adhesive strips which are applied to one side of the **fidbox** are peeled off and fixed with this side going into the parquet element. Use **no other** adhesive or sealants as they can endanger the flawless function of the fidbox.

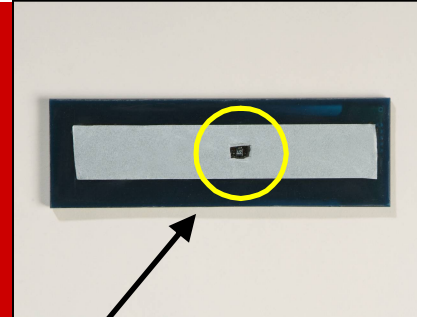

## 3<sup>rd</sup> step

During parquet installation you insert the prepared parquet element at the defined position. **Avoid** the contact of parquet adhesive to the underside of the **fidbox** which is the point of measurement which may cause falsified measurements.



## 4<sup>th</sup> step

After accomplished parquet installation note the exact position of the **fidbox** in the "Floor Passport" and enter all general information concerning this particular project. Thereby you facilitate prompt position locating and simplified data recovery if required.



[www.fidbox.at](http://www.fidbox.at)